
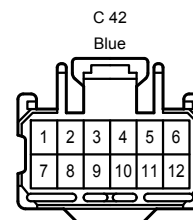
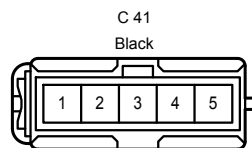
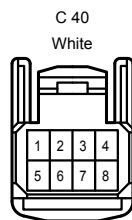
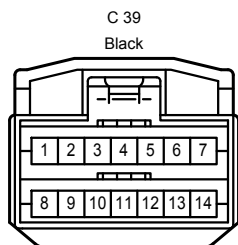
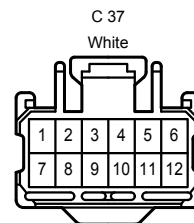
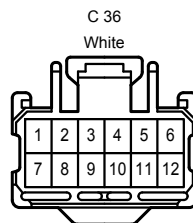
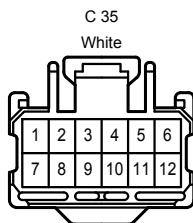
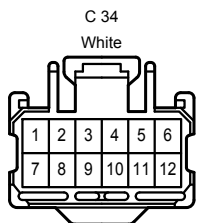
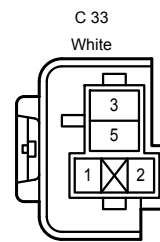
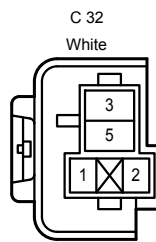
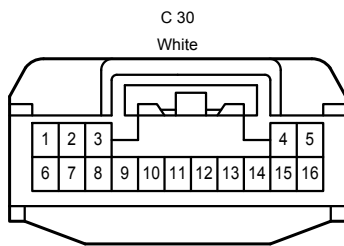
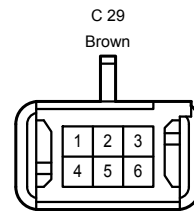
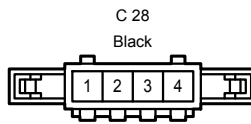
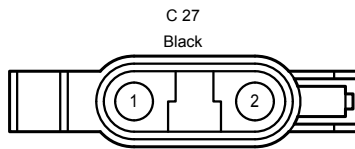
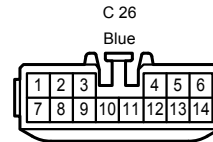
 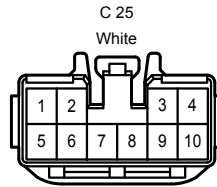

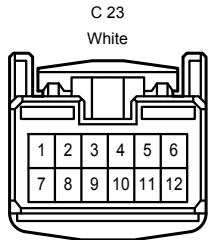
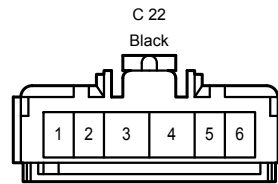
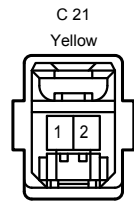


- C 19 Airbag Sensor Assembly Center
- C 21 Airbag Squib (Steering Wheel Pad)
- C 22 Headlamp Leveling SW
- C 23 Power Steering ECU
- C 24 Power Steering ECU
- C 25 Door Control ECU with Receiver
- C 26 Running Light Relay
- C 27 Blower Motor
- C 28 Blower Resistor
- C 29 Airbag Cut Off SW
- C 30 Transponder Key ECU
- C 31 Transponder Key Coil
- C 32 Tail Lamp Relay
- C 33 Power Window Relay
- C 34 Junction Connector
- C 35 Junction Connector
- C 36 Junction Connector
- C 37 Junction Connector
- C 39 Shift Lever Position Sensor
- C 40 Transmission Shift Main SW
- C 41 PTC Heater
- C 42 Junction Connector

- H 10 Parking Brake SW
- H 11 Airbag Sensor Assembly Center

- L 1 Airbag Squib (Front Passenger's Airbag Assembly)

Position of Parts in Instrument Panel <LHD>

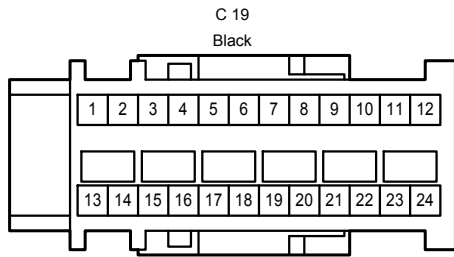


Position of Parts in Instrument Panel <LHD>

H 10
White



H 11
Gray

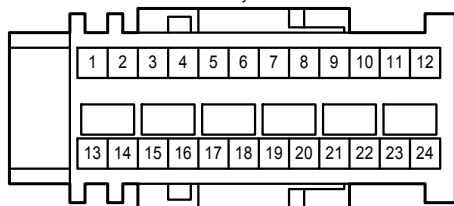

L 1
Orange

